

ACCESSORIES

TOOL KIT


- 38-0302-00 ~ Tool Kit with Tools
- 38-0304-00 ~ 8" File
- 38-0307-00 ~ Crimping Tool
- 38-3922-00 ~ Mold Cleaning Brush
- 38-0308-00 ~ Screwdriver
- 38-0306-00 ~ Card Cloth Brush
- 38-0305-00 ~ Wire Brush
- 38-0302-02 ~ Tool Kit with Tools listed above plus
- 38-0101-00 ~ Rasp
- 38-4129-00 ~ 1 lb. Packing Material
- 38-0303-00 ~ Tool Box Only



REBAR PACKING

Packing Material is either copper shim stock or ceramic fiber pad and can be used for **one** connection only.

- Part #38-0329-00 Copper Shim
- Part #38-4061-00 3" x 3" x 1/4"
- Part #38-4062-00 3" x 3" x 1/4"
- Part #38-4063-00 3" x 2 1/2" x 1/4"

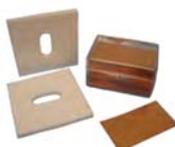

38-0309-00 FLINT IGNITOR

The 38-0309-00 Flint Ignitor is used to ignite the starting powder. Each mold that is sold with a frame has a Flint Ignitor included. Replacement flints are available upon request. Part #38-0309-01.



38-0904-00 Flint IGNITOR EXTENSION

The 38-0904-00 Flint Ignitor Extension allows the installer to stand 36" from the mold. Flint Ignitor is included.



38-0101-00 RASP

This tempered steel, curved Rasp is recommended for removing rust and mill scale from steel and cast iron surfaces. The blade is replaceable. Specify part # 38-0101-01. Not recommended for use on galvanized surfaces.

PACKING MATERIAL

Packing Material is used to prevent the molten weld metal from leaking out of the mold. When cable opening becomes worn from heavy use, the packing material may be used to prolong mold use. It is also used around 7 strand cable to prevent leaking. Packing material comes in a 1 lb or a 5 lb package.



- Part #38-4129-00 for 1 lb package
- Part #38-4129-05 for 5 lb package

Note: This packing material to be used on outside of mold only. If packing gets into weld cavity, gassy welds will result.